

1 不要な列を消す

スプレッドシートで不要な列を消去するには、消したい列をマウスの中クリック(またはAltキーを 押しながら左クリック)します。この状態は印刷時などにも反映されます。

い編集				·	4. TU + 1		1				8	A	
×	X Fold	甲ク	リックで	、个安	な 列をF	判际	Offset	G/L Mor	X Diam/J	Color	Spin X	Group	4
[ppm]	T					[abn/ppm]		3	[ppm]	8	8	6	
L			, Li	L	L	L	- L	L	L	L.	L		1
8.094 8.081 7.265	0000	4 4 4	0.330 0.325 0.141	1.463k 1.440k 623.534	472.475 459.378 544.378	7.184 7.184 2.184	-0.407 -0.407 -0.407	0.000 0.000 0.000	3.526m 3.289m 2.960m			Â	
7.263	0	A	0.101 0.110 0.251	446.919 488.167	243.096 268.433	7.184 7.184	-0.407	0.000	1.994m 1.956m				
スナレッドシート											1.5 .5		
3 71-0 129- ルの編集											8	H	
スプルドノー 人の編集 X	Class	Normai	Integral	Intensity	Slope	Offset	G/L Mbx	X Diam/J	Color (Spin X	Group X	Residu	
1フレットシー 人の編集 X [ppm]	Class	Normał	Integral	Intensity	Slope (abn/ppm)	Offset	G/L Nix	X Diam/3 [ppm]	Color	Spin X	Group X	Resida	1

★ 消した列を復活させるには、一度スプレッドシートを閉じて再度開いてください。

2 条件に合った行だけを表示する

スプレッドシートではフィルタを掛けて表示することができます。

①条件分岐させる列の条件欄をクリックする。

- ② セルの編集欄に、条件を入力する(and, or が使用可能です)。
- ③ Enterキーを押して条件を確定する。



🔊 JEOL RESONANCE